


Canopy Ready Mesh Panel Booth Frame

Instructions for Assembly

Note: This frame contains canopy parts, and is ready for later conversion to the full Trimline or Archtop Canopy frame.

PARTS LIST:



Poles:

- (5) No Color Male Pole Sections - 61"
- (5) No Color Female Pole Sections - 58 1/4"
- (2) Purple Male Pole Sections - 61"
- (2) Purple Female Pole Sections - 58 1/4"
- (4) Telescoping Leg Tops - 50 1/4"
- (4) Telescoping Leg Bottoms - 47"



Connecting Hardware:

- (4) Canopy Corner Joints
- (4) Feet
- (20) Thumbscrews
- (2) StaBar Ell Joints
- (2) StaBar 3 Way Joints
- (8) Ball Bungees (for bundling poles when transporting)



1. Connect male and female pole sections. This will give you (7) 116 1/2" Horizontal poles.
2. Assemble 4 legs as per sidebar illustration, with a stabar ell on each of two legs, and stabar 3 way on each of two legs. →
3. Lay (4) 116 1/2" poles out in a square, and then connect the four poles to the four Canopy corner joints. If you are using one or more French Wall Mesh Panels, install the offset leg joints at this time (as described in step 1 of your French Wall Mesh Panel instructions).




4. The next portion of the procedure can be done by one person but is easier with two people. Ask a neighbor for a hand (It will only take a minute).
5. With each person holding a front leg (the ones with StaBar Ells attached), Lift the front two corners of the frame, and insert a leg into each of the front corner joints. Then, lift the rear corners of the frame, and insert a leg (with StaBar 3 Way attached) into each of the rear corner joints.
6. NOTE: You may choose to extend the telescoping legs before inserting them into the corner joints, or you may extend the telescoping legs, then insert them into the corners. Once the frame is up on four legs, go around and extend the legs.

7. The Frame should now look like this:



8. Attach StaBar poles (lower horizontal poles) to the frame by inserting the poles into the StaBar joints until they click into place. Attach the rear pole FIRST, then the sides.

9. Insert Thumbscrews in nuts and tighten. Leave them in the nuts when dismantling.

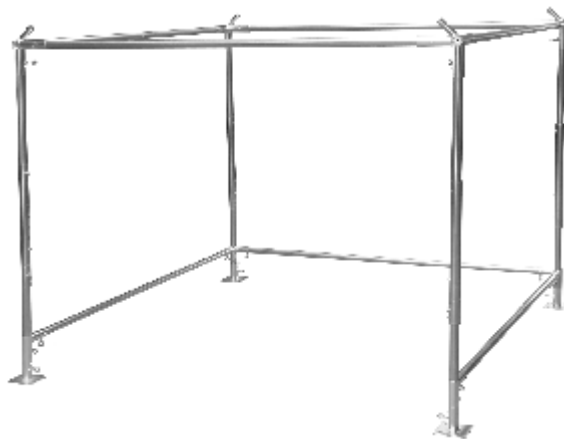

10. This completes the basic frame:

11. To install your Mesh Panel display walls, follow the setup instructions included with your Mesh Panels. To add a French Wall frame to your basic frame, refer to your French Wall Mesh Panel instructions.