

EZ Up Convertible French Wall Frame Instructions

To Add a Convertible French Wall Mesh Panel to your E-Z up or other pop-up Canopy

Parts:

- | | |
|---|---|
| (2) Telescoping Legs (two piece unit) | (1) 22 ½" female pole (for 7 ft. StaBar pole) |
| (1) StaBar 3-Way | (2) 32 ½" snap button poles |
| (2) Canopy Foot | (1) StaBar Ell Joint |
| (1) French Wall Ell Joint | (1) Door 3 Way Joint |
| (2) 9" Ball Bungee (for bundling poles) | (19) Thumbscrews (thread onto joints) |



StaBar 3-Way



StaBar Ell



Foot



French Wall Ell





Door 3-Way

Assembly:

NOTE: Assemble your Rear Door frame using the E-Z up Rear Door Frame Assembly Instructions with these exceptions.

1. Use a Rear Door 3-Way rather than a Rear Door Ell on the upper StaBar pole and Use a StaBar 3-Way rather than a StaBar Ell on the fifth leg. (See Picture)
2. Slide a StaBar Ell onto the bottom of one of your telescoping legs and attach a foot below it. Finally attach a French Wall Ell on the top.
3. Snap two 32 ½" poles into the Door 3-way and the StaBar 3-way on the fifth leg so that they extend into the booth.
4. Attach the sixth leg to the two 32 1/2 " poles so that it makes a square frame parallel to the sides of your booth. (See Picture)

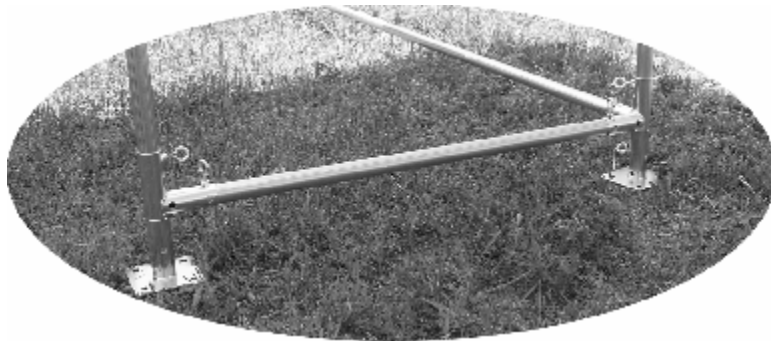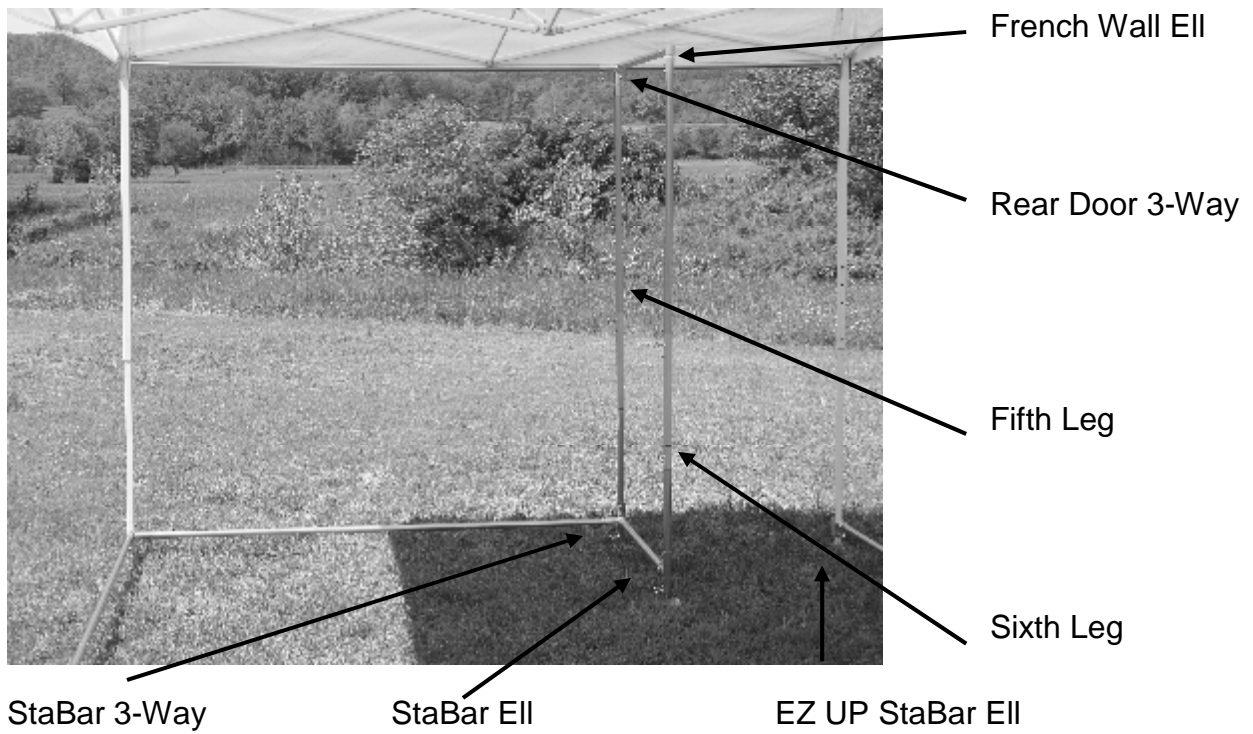

5. Attach your side Mesh Panels as normal.
6. Attach the back, conversion Mesh Panel to the Rear Door frame and wrap it forward onto the Convertible French Wall frame.

