

# Rear Door Frame for TrimLine Canopy

## Instructions for Assembly

### Parts:


- (1) Telescoping Leg - bottom section nested inside top section
- (1) 22 ½" Female pole
- (1) Foot
- (1) Door Ell Joint
- (2) StaBar Ell Joints



### Assembly:

**1. While assembling your TrimLine Canopy:** Slide the Door Ell Joint onto the rear upper horizontal pole of the roof frame, positioning approximately 3 feet from corner.

**2. Slide StaBar Joints onto leg bottoms:** a StaBar 3-way in the rear corner farthest from the door, a StaBar Ell in the rear corner with the doorway, and a StaBar ell (and foot) on the Rear Door Leg.

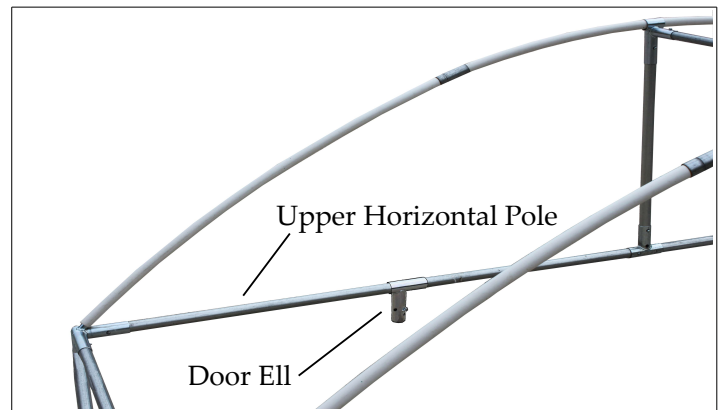

**3. Finish assembling your canopy.** Once you have all four corner legs attached, insert the fifth leg into the Door Ell Joint.

**4. Assemble the StaBars,** making one of them at 7ft long by using a standard no-color code male pole and the 22 ½" female pole. Starting with the back wall (7ft StaBar), attach the StaBars to their joints, adjusting the Rear Door Leg position as needed to meet the StaBar at a ninety degree angle.

